

Thank you for purchasing the AC adapter.  
This product is designed to be used by a person with specialized knowledge.  
This User's Manual describes the specifications and handling precautions of the AC adapter.  
Before using the AC adapter, thoroughly read this manual to get a clear understanding on proper use.  
For detailed handling procedures, refer to the instrument (main unit) User's Manual.  
This manual is an essential part of the product; keep it a safe place for future reference.

**⚠ WARNING**

- To prevent the possibility electrical shock or fire, be sure to use the AC adapter and the power cord supplied by YOKOGAWA.
- This product is intended for use in combination with Yokogawa products that refer to it only.
- Check that the power source voltage matches the supply voltage rating of the AC adapter, and then connect to the outlet.
- Check that the power switch of the instrument is turned OFF and then connect the AC adapter.
- If the instrument is not used for a prolonged period, disconnect the AC adapter from the outlet.
- Do not place anything on the AC adapter or power cord, and prevent heat sources from coming into contact with them.
- When unplugging the power cord from the outlet, be sure to hold the plug and never pull the actual cord.
- When cleaning the AC adapter, disconnect the AC adapter from the outlet and gently wipe the external surfaces with a soft clean cloth. Do not use chemical such as benzine or thinner.
- Do not throw (dispose of ) the AC adapter in fire or apply heat to it.
- Do not use it, where the code is bundled (bent).
- If the power cord is damaged, contact your dealer.

Model	Suffix Code	Specifications
94016	-F -S	Power cord: VDE standard BS standard

Make sure that the attached power cord meets the designated standards of the country and area that you are using it in.

**■ Specifications (Power Supply Rating of the AC Adapter)**


Rated supply voltage:	220 to 240 VAC
Rated supply frequency:	50/60 Hz
No load Current:	45 mA
Output voltage rating of AC adapter:	8.5 VDC, 150 mADC
Operating temperature:	-10 to 40°C
Safety standards:	EN 60950-1 Pollution degree 2, Indoor use, Altitude 2000 m or less
EMC standards:	EN 55032 Class B, EN 55024 EN 61000-3-2, EN 61000-3-3

---

## ■ External Dimensions

---

Unit: mm

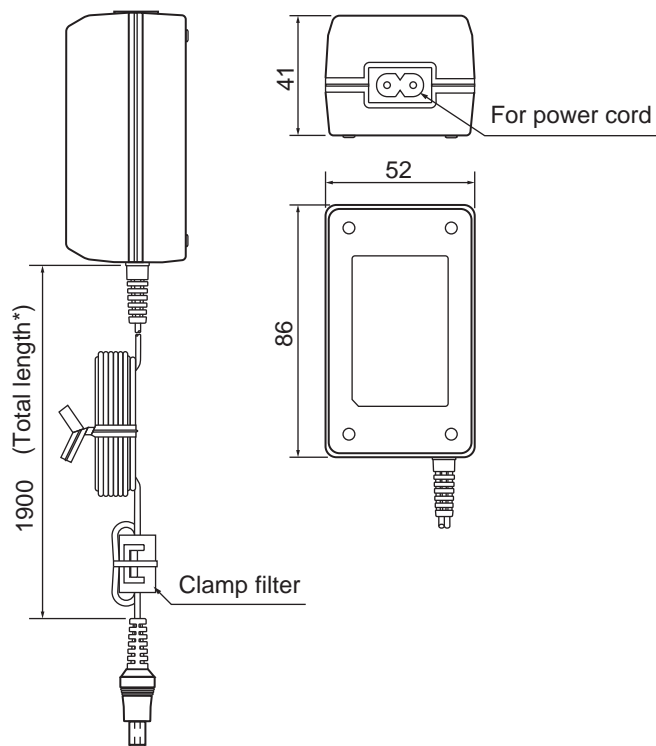

Polarity of Plug



\* Total length: Includes the length of looped around the clamp filter.

---

## ■ Sales in Each Country or Region

---

### Disposing the Product



#### Waste Electrical and Electronic Equipment (WEEE), Directive

(This directive is valid only in the EU.)

This product complies with the WEEE directive marking requirement.

This marking indicates that you must not discard this electrical/electronic product in domestic household waste.

#### Product Category

With reference to the equipment types in the WEEE directive, this product is classified as a "Monitoring and control instruments" product.

When disposing products in the EU, contact your local Yokogawa Europe B.V. office.

Do not dispose in domestic household waste.

### Authorized Representative in the EEA

Yokogawa Europe BV. is the authorized representative of Yokogawa Test & Measurement Corporation for this product in the EEA." (EEA: European Economic Area)

### <Yokogawa Europe B. V. Office>

#### YOKOGAWA EUROPE B.V. (THE NETHERLANDS)

Euroweg 2, 3825 HD, Amersfoort THE NETHERLANDS

Phone: 31-88-4641000 Facsimile: 31-88-4641111