

PicoSource® PG900 Series

USB differential pulse generators



Three PicoSource models

Integrated 60 ps pulse outputs: PG911 Tunnel diode 40 ps pulse heads: PG912 Both output types: PG914

Integrated pulse outputs

Differential with deskew 60 ps transition time 2.5 V to 6 V amplitude

Tunnel diode pulse heads

Differential with deskew 40 ps transition time 200 mV amplitude

Advanced features

Output deskew with 1 ps resolution Low-jitter trigger input and output User-variable pulse width Internal trigger clock Trigger hold-off

Configuration

USB 2.0 connected Microsoft Windows compatible

Applications

TDR/TDT network and match analysis
Spectral and flatness measurements
Timing, jitter, and crosstalk determination
Semiconductor testing
Impulse ultra-wideband radars
Laser diode drivers

PicoSource® PG900 Series USB differential pulse generators

The fast-transition pulse can stimulate a transmission path, device, or network with a broad-spectrum signal in a single instant. These signals, combined with differential capability, are valuable for making high-speed broadband measurements in many fields such as time domain reflectometry, semiconductor testing, gigabit interconnect and port testing, and in radar systems.

High-speed differential data is becoming the dominant measurement challenge in digital, computing, interconnect and telecommunications systems. Despite this need, cost-effective, fast-transition differential pulse generators were hard to find ... until now.



Key specifications

PicoSource PG911 and PG914

- Integrated 50 Ω SMA(f) step recovery diode outputs
- < 60 ps single-ended pulse transition time
- Two 2.5 V to 6 V variable amplitude outputs
- ±1 ns timing deskew in 1 ps steps
- 20 dB 10 GHz SMA(m-f) attenuators supplied fitted to SRD pulse outputs

PicoSource PG912 and PG914

- External 50 Ω N(m) positive and negative tunnel diode pulse heads
- < 40 ps pulse transition time
- Fixed 200 mV output amplitude
- ±500 ps timing deskew in 1 ps steps
- Inter-series N(f)-SMA(m) adaptors included with pulse heads

All PicoSource PG900 models

- Differential outputs
- 200 ns to 4 μs pulse width
- Adjustable 1 µs to 1 s internal clock period
- Typical 3.0 ps RMS jitter relative to external trigger

A versatile, portable pulse generator


The PicoSource PG900 Series of low-jitter triggered differential USB pulse generators offer a range of advanced features:

- The pulse outputs are optimized for broad spectral content (fastest transition time) to best suit spectral and timedomain transmission and reflectometry measurements
- The internal clock provides stand-alone, self-triggered operation
- Trigger input and output allow the pulse generators to source or respond to system triggers
- Differential outputs ensure that the proliferation of gigabit differential interconnects and systems (such as SATA, USB3, HDMI, Ethernet) can all be addressed


Essential to any differential measurement is the ability to adjust for small but significant velocity and path length differences that are bound to exist in any measurement setup. The PicoSource PG900 pulse generator outputs can each be adjusted (time-skewed) by 1 ns (integrated pulse outputs) or 200 ps (tunnel diode pulse heads) in 1 ps increments to deskew path differences before the measurement, or to deliberately stress a transmission path with timing skew.

Despite their small size and portability, PicoSource pulse generators have plenty of drive capability, with integrated step recovery diode outputs of up to 6 V pk each into 50 Ω . That's a powerful 12 V pk differential pulse amplitude to drive lossy paths or stress system ports. Outputs are adjustable in 10 mV steps down to 2.5 V pk. An adjustable amplitude limit is provided to protect sensitive devices, and 20 dB attenuators are supplied fitted to the pulse outputs for small-signal optimal match applications.

Step recovery diode variable-amplitude pulse

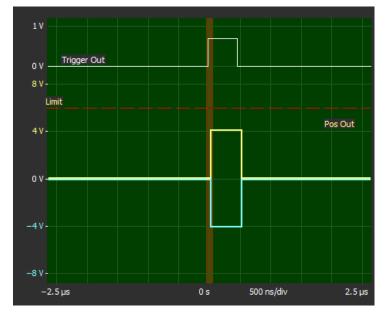

Tunnel diode head fixed-amplitude pulse

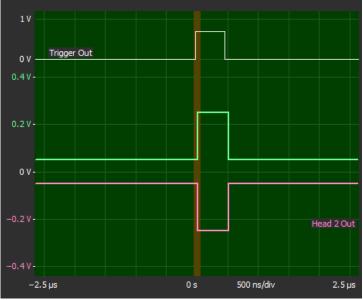

The positive (fast rise) and negative (fast fall) pulses are both ground-referenced and each pulses in opposite polarity to its selected amplitude. This amplitude (the "mark") is held for the selected pulse width and then returns to ground. Further pulses are prevented for the selected hold-off period and thereafter repeat at 40 ns after the next received trigger. When the internal clock is selected, the pulse repeats at the

selected period and hold-off is inactive. An output trigger is generated 40 ns before every pulse, however initiated.


Pulse transition time is typically 55 ps and spectral content extends to 12 GHz.


The negative (fast fall) pulse can be selected for even faster transition time by selecting "fast" rather than "smooth" mode. Pulse aberration is compromised but transition time is typically 45 ps and spectral content extends to around 14 GHz.

The positive (fast rise) and negative (fast fall) pulses are both DC offset referenced and each pulses in opposite polarity by its independent fixed amplitude. This amplitude (the "mark") is held for the selected pulse width and then returns to ground. Further pulses are prevented for the selected hold-off period and thereafter repeat at 40 ns after the next received trigger. When the internal clock is selected, the pulse repeats at the selected period and hold-off is inactive. An output trigger is generated 40 ns before every pulse, however initiated.

Pulse transition time is typically 40 ps and spectral content extends to 14 GHz.

Typical pulse shapes are shown below:

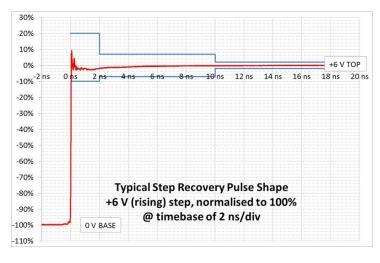

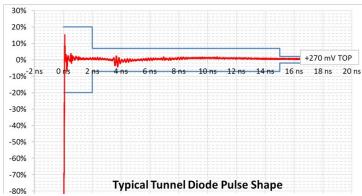


Connection diagrams

The following diagrams demonstrate differential and singleended TDR and TDT setup options for a PicoSource pulse generator, PicoScope 9300 Series sampling oscilloscope, and the device under test (DUT). In all setups shown, the PG911 or PG912 pulse generator can be replaced by a PicoSource PG914.


TDR applications


PicoSource pulse generators can be used to realize time domain reflectometry with a PicoScope 9300 Series sampling oscilloscope without that function (PicoScope 9301, 9302, 9321 and 9341).

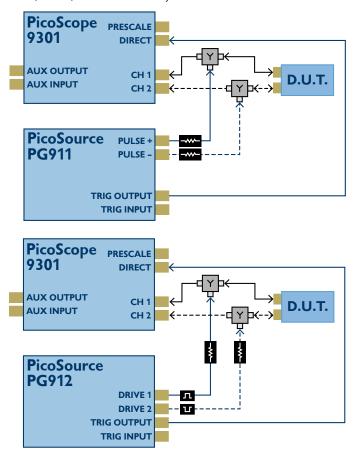

TDT applications


PicoSource pulse generators can also be used to realize time domain transmission (TDT) with a PicoScope 9300 sampling oscilloscope without that function (PicoScope 9301, 9302, 9321, and 9341). They also offer the versatility of a remotely-placed signal generator for long line or installed system testing when used with any of the PicoScope 9300 models.

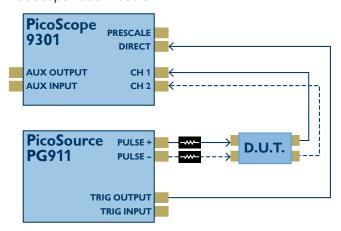



TDT and crosstalk application

PicoSource pulse generators can be used with a PicoScope 9341 four-channel sampling oscilloscope for simultaneous time domain transmission and crosstalk assessment.

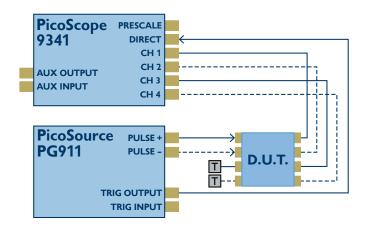

Single-ended measurements

Single-ended measurements can be performed with a twochannel sampling oscilloscope. Differential measurements can also be tackled by first measuring transmission and then changing connections for crosstalk measurement. Unconnected ports should be correctly terminated in this case.

PicoSource PG900 pulse control software for Windows

PicoSource pulse generators are connected by USB, and controlled by the supplied PicoSource PG900 software. This straightforward application runs on Microsoft Windows and features a clear graphical display of the pulse, limits and trigger settings as they are applied. Default and user pulse settings can be saved for future use, and the software can be tested in demonstration mode.

PicoSource PG900 software can be downloaded from **www.picotech.com**.



PicoSource® PG900 Series pulse generator specifications PICOSOURCE PG911 AND PG914

INTEGRATED STEP RECOVERY DIODE PULSE OUTPUTS

Positive-going (fast rise) and negative-going (fast fall) outputs returning to 0 V Adjustable amplitude and timing parameters. Fast transition on leading edge.			
50 Ω			
SMA(f)			
Adjustable 2.5 V to 6 V in 10 mV steps			
±10%			
2.5 V to 6 V, adjustable in 100 mV increments			
50% maximum (for 2.5 V to 4 V amplitude)	2)		
Adjustable in 1 ps steps over 2 ns range			
Positive or negative-going, smooth mode	Negative-going, fast mode		
< 60 ps (10% to 90%)	< 50 ps (10% to 90%)		
< +20%, -10% for first 2 ns < ±7% to 10 ns < ±2% to (pulse width-50 ns)	< +40%, -10%		
< 8 ns (10% to 90%)			
	Adjustable amplitude and timing paramet 50Ω SMA(f) Adjustable 2.5 V to 6 V in 10 mV steps $\pm 10\%$ 2.5 V to 6 V, adjustable in 100 mV increme 50% maximum (for 2.5 V to 4 V amplitude 20% maximum (up to 6 V amplitude) Adjustable in 1 ps steps over 2 ns range Positive or negative-going, smooth mode < $60 \text{ ps} (10\% \text{ to } 90\%)$ < $+20\%$, -10% for first 2 ns < $\pm 7\%$ to 10 ns < $\pm 2\%$ to (pulse width-50 ns)		

PICOSOURCE PG912 AND PG914

DRIVE OUTPUTS WITH TUNNEL DIODE PULSE HEADS

Positive tunnel diode pulse head	Positive-going (fast rise) output on < 70 mV pedestal. Fixed amplitude and adjustable timing parameters. Fast transition on leading edge.
Negative tunnel diode pulse head	Negative going (fast fall) output on < -70 mV pedestal. Fixed amplitude and adjustable variable timing parameters. Fast transition on leading edge.
Output impedance	50 Ω, ±2 Ω
Output connector	N(m)
Output amplitude	Fixed 200 mV
Output accuracy	±25%
Differential deskew range	Adjustable in 1 ps steps over 200 ps minimum, 300 ps typical
Pulse transition time	< 40 ps (10 % to 90%)
Pulse aberrations	< ±20%, for first 2 ns < ±7% to 15 ns < ±2% to (pulse width – 50 ns)
Trailing edge transition time	< 8 ns (10% to 90%)
Dimensions (each pulse head)	80 mm x 28 mm x 25 mm
Weight (each pulse head)	125 g

ALL MODELS AND OUTPUTS

	 	ЛING	
- 1	 1111	/IIIII-	

Pulse trigger source	External input, manual single shot event or internal clock
Jitter relative to leading edge	3.0 ps RMS typical. 3.5 ps RMS maximum.
Poet-triager delay to pulled leading adde	Fixed 42 ns ±2 ns Allows leading-edge capture on sampling oscilloscopes
Pulse width and accuracy	200 ns to 4 µs ±10% ±50 ns, adjustable in steps of 25 ns
Pulse width jitter	< 150 ppm of width RMS
External tridder hold-off	Adjustable 1 μ s to 1.3 ms in steps of 200 ns, to maximum of 345 ms in steps of < 15 ppm
INTERNAL CLOCK SPECIFICATION	

PicoSource® PG900 Series pulse generator specifications continued

Period and accuracy	Adjustable 1 µs to 1 s, ±100 ppm ±10 ns in steps of 200 ns
EXTERNAL TRIGGER INPUT SPECIFICATION	
Impedance	50 Ω ±1%
Connector	SMA(f)
Maximum input level	+16 dBm, or ±2 V DC or AC pk
Bandwidth	1 GHz, DC coupled
Trigger polarity	Selectable rising or falling edge
Trigger level	Selectable -1 V to +1 V in steps of 1 mV
Sensitivity	< 50 mV pk-pk DC to 100 MHz, rising linearly to 100 mV pk-pk at 1 GHz
Minimum pulse width	500 ps at 100 mV pk-pk
EXTERNAL TRIGGER OUTPUT SPECIFICATION	
Trigger output pulse	Fixed amplitude and timing parameters, positive edge polarity, trigger is leading edge
Impedance	50 Ω, ±0.5 Ω
Connector	SMA(f)
Amplitude and offset	> 700 mV fixed, on logic low of 0 V ± < 100 mV
Pulse width	500 ns, ±100 ns
Trigger to trigger output delay	4 ns, ±1 ns
Trigger to trigger output jitter	2.5 ps RMS typical. 3 ps RMS maximum.
Transition time	< 400 ps (10% to 90%)
GENERAL SPECIFICATIONS	
AC to DC adaptor	5 V ±5% at 1.6 A, 8 W, universal plug (adaptor included)
PC connection	USB 2.0 (USB 1.1 and USB 3.0 compatible), 1.8 m USB 2.0 lead included
PC requirements	Windows XP SP3 to Windows 8
Operating temperature range	+5 °C to +35 °C
Storage temperature range	−20 °C to +50 °C
Temperature range for stated specifications	+15 °C to +25 °C or T _{CAL} (temperature of calibration) ±5 °C
Operating humidity range	< 85% RH (non-condensing) at +35 °C
Storage humidity range	< 95% RH (non-condensing)
Altitude range	Up to 2000 m
Pollution degree	2
Ingress protection	IP20
Dimensions (instrument)	190 mm W x 180 mm D x 40 mm H
Weight (instrument)	560 g

Specifications describe guaranteed performance over the stated temperature range and apply after the instrument's temperature has been stabilized in 1 hour of continuous operation. All specifications are subject to change without notice.

Factory calibration cycle. For optimum performance, the instrument should have a complete verification of specifications once every 12 months.

Front and rear panels

PicoSource PG911




PicoSource PG912




TD pulse head drive outputs and input

PicoSource PG914

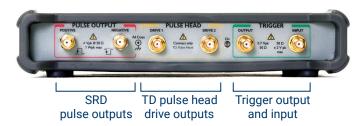

All models

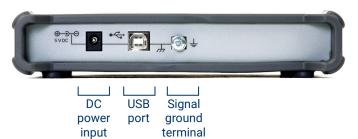

Optional accessories

MODEL	DESCRIPTION	USD*	EUR*	GBP*
TA237	 14 GHz 25 ps TDR kit 18 GHz 50 Ω SMA(m-m) within-series adaptor 18 GHz SMA(f) reference short 18 GHz SMA(f) reference load 	329	289	229
TA238	 14 GHz power divider kit 18 GHz 50 Ω SMA(f-f-f) 3-resistor 6 dB power divider 2 x 10 cm precision coaxial SMA(m-m) cable For use with PicoScope 9300 Series 	539	479	379
TA181	Attenuator 3 dB 10 GHz 50 Ω SMA (m-f)	75	67	53
TA261	Attenuator 6 dB 10 GHz 50 Ω SMA (m-f)	75	67	53
TA262	Attenuator 10 dB 10 GHz 50 Ω SMA (m-f)	75	67	53
TA173	Attenuator 20 dB 10 GHz 50 Ω SMA (m-f)	75	67	53
TA172	18 GHz, 50 Ω N(f) -SMA(m) inter-series adaptor	129	119	92
TA170	18 GHz 50 Ω SMA(m-f) connector saver adaptor	20	18	14
TA263	60 cm precision high-flex unsleeved coaxial cable SMA(m-m) < 1.7 dB loss @ 10 GHz	75	67	53
TA264	30 cm precision high-flex unsleeved coaxial cable SMA(m-m) < 1.1 dB loss @ 10 GHz	65	58	46
TA265	30 cm precision sleeved coaxial cable SMA(m-m) < 1.1 dB loss @ 10 GHz	65	58	46

^{*} Prices correct at the time of publication. VAT not included. Please contact Pico Technology for the latest prices before ordering.







PicoSource PG911

PicoSource PG912

PicoSource PG914

KIT CONTENTS

All kits contain:

PicoSource PG900 software disk • Quick Start Guide • AC to DC adaptor 5 V DC at 2 A, universal input USB 2.0 cable 1.8 m • SMA/PC3.5/2.92 wrench • Storage and carry case

DESCRIPTION	ORDER CODE	PG911	PG912	PG914
Positive 40 ps tunnel diode pulse head (attached to the device)	Not available separately		•	•
Negative 40 ps tunnel diode pulse head (attached to the device)	Not available separately		•	•
12 GHz N(f) to SMA(m) adaptor (2 pack)	TA172		•	•
10 GHz 20 dB SMA(m-f) attenuator (2 pack)	TA173	•		•
50 Ω coaxial SMA(m-m) pulse drive cable 60 cm (2 pack)	Not available separately		•	•

Ordering information

MODEL	ORDER CODE	PULSE GENERATOR	USD*	EUR*	GBP*
PicoSource PG911	PP977	$50~\Omega$ SMA(f) < $60~ps$ differential pulse outputs, 2.5 V to $6~V$ variable amplitude	8095	7215	5675
PicoSource PG912	PP978	$50~\Omega$ N(m) < 40 ps positive and negative tunnel diode pulse heads, $$ > 200 mV fixed amplitude	10 585	9435	7425
PicoSource PG914	PP979	Dual-mode generator with both of the above outputs	13 075	11 645	9175

UK global headquarters:

Pico Technology
James House
Colmworth Business Park
St. Neots
Cambridgeshire
PE19 8YP
United Kingdom

+44 (0) 1480 396 395 sales@picotech.com North America regional office: Asia-Pacific regional office:

Pico Technology 320 N Glenwood Blvd Tyler Texas 75702 United States Pico Technology Room 2252, 22/F, Centro 568 Hengfeng Road Zhabei District Shanghai 200070 PR China

★1 800 591 2796★ sales@picotech.com

★ +86 21 2226-5152 □ pico.china@picotech.com

*Prices correct at the time of publication. Sales taxes not included. Please contact Pico Technology for the latest prices before ordering.

Errors and omissions excepted. *Windows* is a registered trade mark of Microsoft Corporation in the United States and other countries. *Pico Technology, PicoSource* and *PicoScope* are internationally registered trade marks of Pico Technology Ltd.

MM070 on 7. Copyright © 2015–2010 Pico Technology Ltd.

MM070.en-7. Copyright © 2015–2019 Pico Technology Ltd. All rights reserved.

www.picotech.com









